


1.

Insert the supplied USB key into the PC.


Select *Open folder to view files*

If the image AutoPlay does not appear, Use Windows Explorer to display the content.

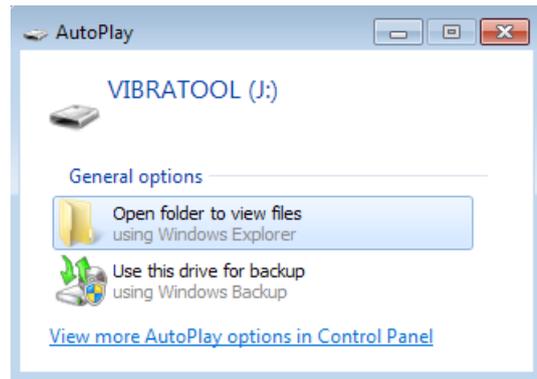


2.

Open the folder *Program* and run *Setup.exe*.

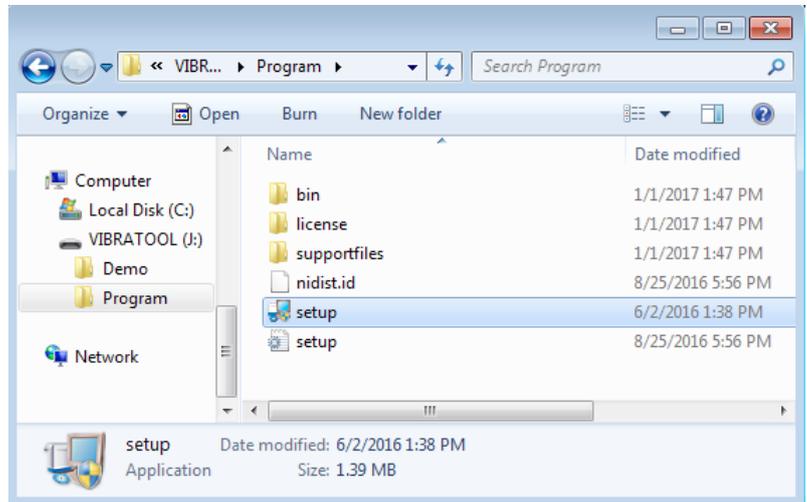


3.

Click *Next* to install the program at the default location. (Recommended)

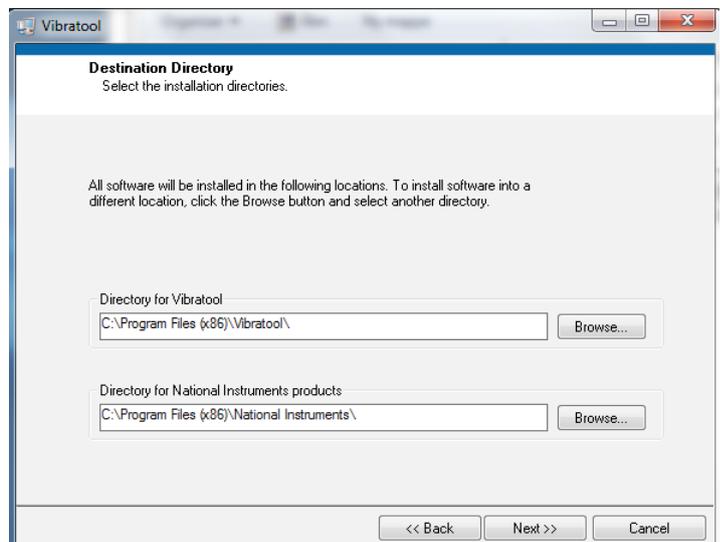


4.

Select *I accept the License Agreement*  
and click *Next*

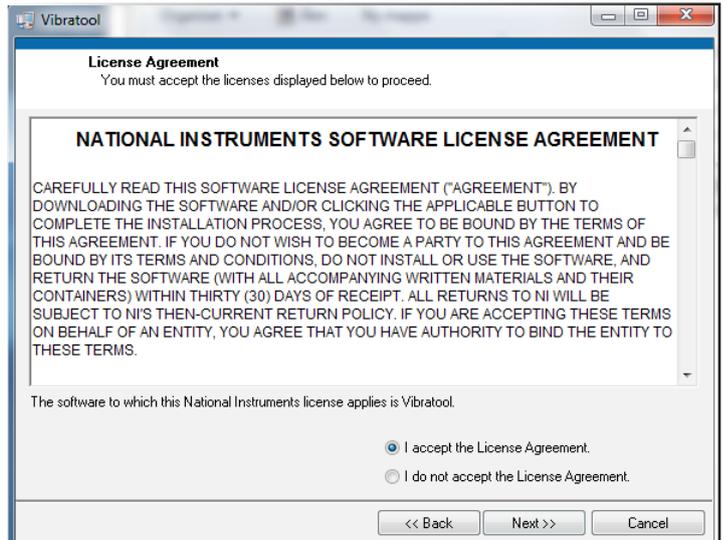

5.


Click *Next*

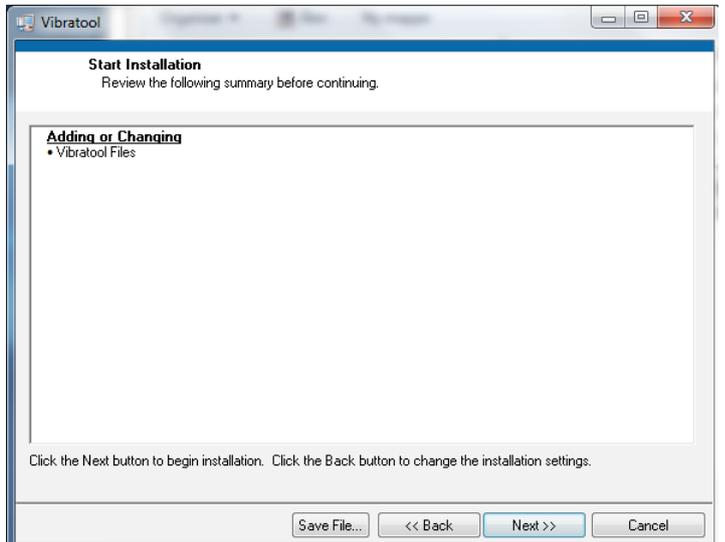

6.

The program is now installed.

Click *Next*

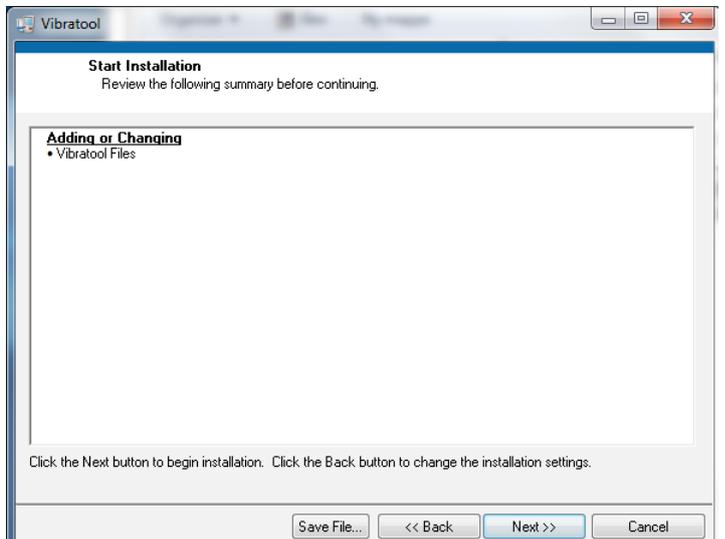


7.

Restart the computer if prompted.

Click **Restart**.

The Vibratool Icon has been added to your desktop, and the program is ready to be used.

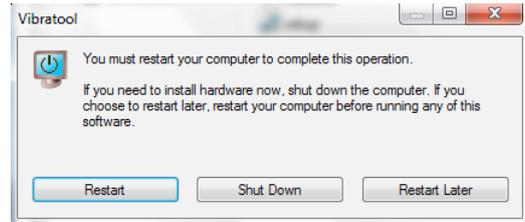

8.

It is possible to open the Vibratool PC software multiple times, to compare measured data.


This will need a small change in the file "Vibratool.ini".

Here is what to do and how to do it:

Right-click the Vibratool Icon and select "Properties".

Make a note of the foldername where "Vibratool.exe" is located.

The location varies depending of your version of Windows.

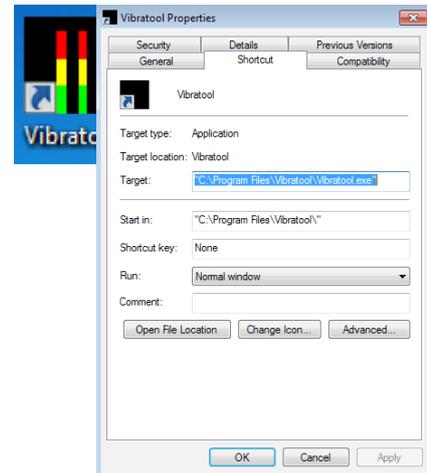

Locate the Icon for "Notepad" in

Start - All Programs - Accessories.

Right-Click the Icon and select "Run as administrator".

In Notepad open the file "Vibratool.ini" located in the same folder as "Vibratool.exe".

Add the line "AllowMultipleInstances=True" without quotes. (Not case sensitive)

Save the change and close notepad.

